

A guide to re-scanning/re-tuning SAORVIEW Approved Equipment

There are many different versions of SAORVIEW Approved boxes and TVs on the market and they are all a little different. These guidelines are general but will be similar to the menus found on most SAORVIEW Approved boxes and TVs. Please check the instruction book that came with the box or TV for exact details for particular models.

Press the **“Menu”** button on the SAORVIEW remote control. Something similar to the image below should appear on the TV screen



Use the up and down arrows on the remote to highlight the **“Setup”** option from this menu, and press **“OK”** on the remote.

If prompted for a code, it will probably be either 0000 or 1234

A window with the option for **“Automatic Channel Scan”** or **“Automatic Channel Search”** or similar will pop up. Select this option again using the up and down arrows on the remote, and press **“OK”**

A box like the image below should appear on the TV screen....



Using the left and right arrows on the remote, highlight **"Yes"** and press **"OK"** on the remote.

If asked to delete, or remove the previous channel line-up, or channels, or similar, please select **"Yes"**.

The SAORVIEW box or TV will then start searching for the channels and a box like the image below will appear on the TV screen....



After a few minutes, a box like the image below will appear on the TV screen which shows the channels have been found....



When the search bar at the bottom has reached 100%, the SAORVIEW box or TV will simply exit the menu, and the re-tune is complete.

Please note: In the future, SAORVIEW will add more channels to the current line-up. To receive these new channels, a re-tune will be required. Please keep these instructions to hand.